

Navigating your radio during transition

- Existing Zones in your radio will be duplicated. This applies to pre-programmed radios only.
- Zones you currently use will still be available to you. Remain there until instructed.
- A new set of Zones will be added in preparation for the new radio system.
- These Zones will have an asterisk (*) displayed near the zone and channel name on your radio display.
- Conventional frequencies will remain the same. In many cases the “CNV” Zone will not be in the radio. The new set of conventional channels can be found in the 8M1 zone.

BEFORE Move to New Radio System

- Remain on the current radio system - Zones *without* (*).
- Radio will BONK (out of range) if you attempt to use a Zone with an (*).
- Use Zone up/down keys to find your assigned Zone *without* the (*).

DURING Move to New Radio System (You will be notified when this happens)

- Zone up/down to find your assigned Zone with (*).
- Continue to utilize Zones with (*). Zones *without* (*) will still be available during the move.

AFTER Move to New Radio System

- ONLY utilize Zones with (*).
- Radio will BONK (out of range) if you attempt to use a Zone *without* an (*) as the original radio system is now turned off.